


**Clayton Off Road
COR-1409201
Jeep Wrangler 1-2" Tall Rear Bump Stops (2018 & Up, JL)**

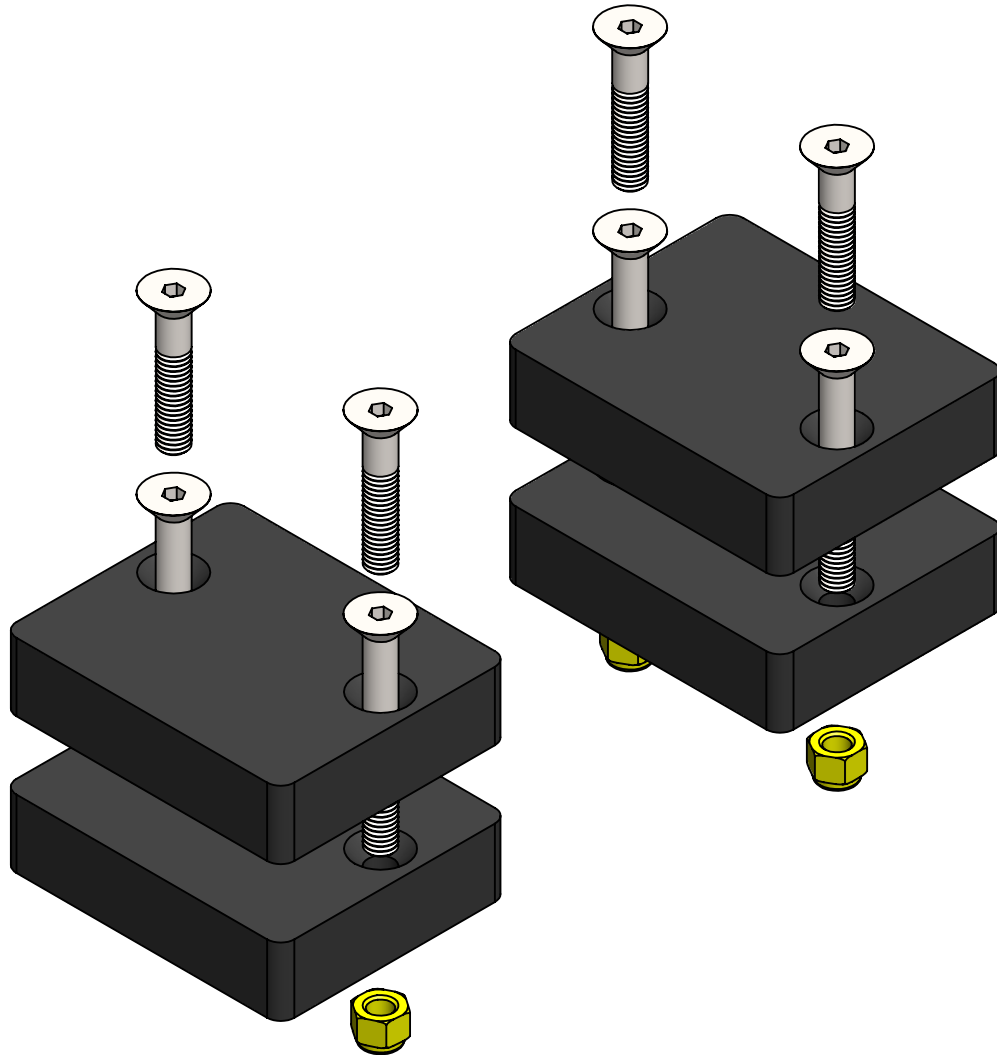

NOTES: This product may require general welding, fabrication and automotive mechanic skills. Welding should only be done by a competent welder. Clayton Off Road implies no guarantees or warranties and is not liable for improper installation. Some grinding and fitment may be required when installing this product. Every vehicle varies slightly and some fabrication may be required.

For more information please visit our website.

Refer to picture below.

Step 1: Determine if you want a 1" or 2" bump stop.

Step 2: Stack 1 or 2 plates on the bump stop pad with the counter sunk side facing up. (1 for 1" 2 for 2").

Step 3: Put bolt in from the top. Use short bolt for 1" and longer bolt for 2"

Step 4: Thread nut on and tighten till it starts to pull into the bump stop.

