


Clayton Off Road
COR-5200940
Tie Rod Steering Stabilizer Mount

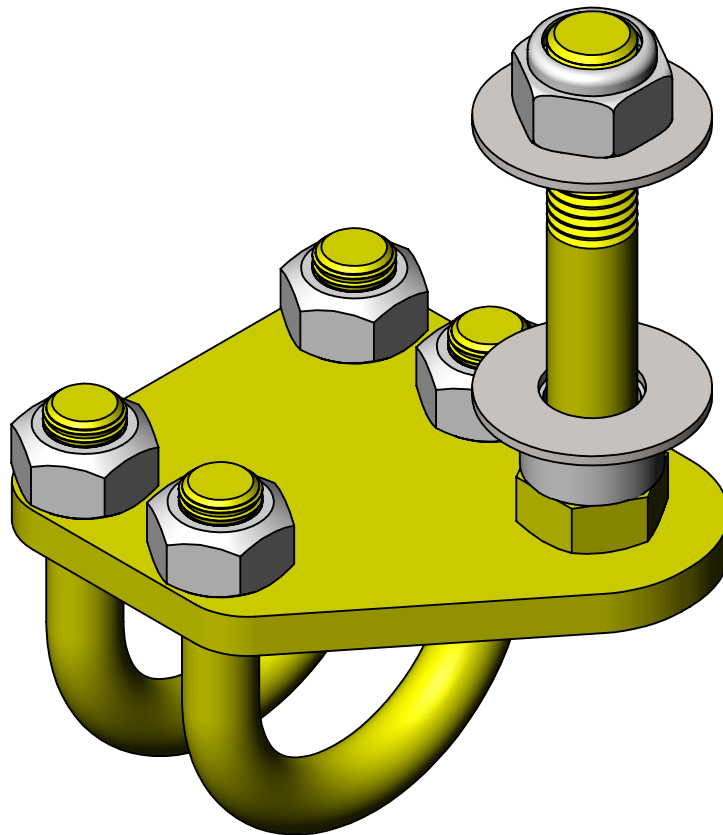

NOTES: This product may require general welding, fabrication and automotive mechanic skills. Welding should only be done by a competent welder. Clayton Off Road implies no guarantees or warranties and is not liable for improper installation. Some grinding and fitment may be required when installing this product. Every vehicle varies slightly and some fabrication may be required.

For more information please visit our website.

Step 1: Determine mounting location and orientation.

Step 2: Install u-bolts and top lock nuts.

Step 3: Install steering stabilizer.

Step 4: Move mount so that stabilizer is in mid point of travel.

Step 5: Snug up u-bolts so stabilizer mount does not move.

Step 6: Turn wheels lock to lock checking clearances and travel.

Step 7: Torque u-bolts and stabilizer mount stud to 40 to 50 ft-lbs .