
## Clayton Off Road COR-1900011 Jeep Front Upper Control Arm Kit (1984-2004 TJ/LJ/XJ/ZJ/WJ)

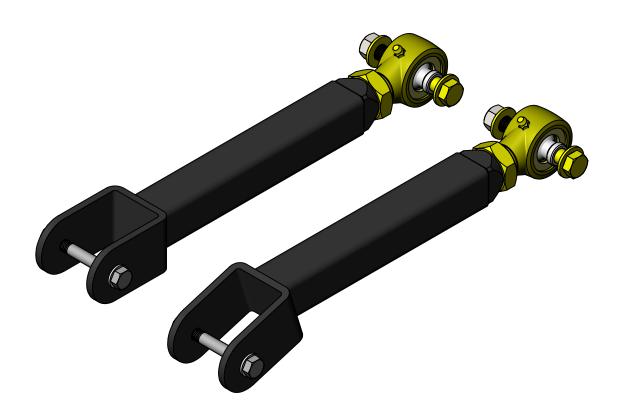

NOTES: This product may require general welding, fabrication and automotive mechanic skills. Welding should only be done by a competent welder. Clayton Off Road implies no guarantees or warranties and is not liable for improper installation. Some grinding and fitment may be required when installing this product. Every vehicle varies slightly and some fabrication may be required.

For more information please visit our website.

Refer to drawing view below.

- Step 1: Support axle from pivoting on lower control arms. (A bottle jack works well)
- Step 2: Remove old upper control arms.
- Step 3: Make sure vehicle is at ride height and track is set.
- Step 4: Install new upper control arm at axle using new hardware.
- Step 5: Adjust caster angle to specifications below.
- Step 6: Adjust both arm length to get the bolts in on the control arm mount with grease fitting up.
- Step 7: Tighten bolts.
- Step 8: Tighten jam nuts. (We recommend a 1 7/16" combination wrench for this. We also recommend cutting the box end off the wrench and getting a three foot pieces pipe to put over the end of the wrench for leverage. Inserting a large screw driver between the joint body and the mount will hold the housing joint straight.)
- Step 9: The joints are pre greased so initial greasing is not required. (We do recommend greasing the joints every time you change your oils or grease other components on your vehicle. Use a hand grease gun not a pneumatic grease gun.

We recommend a caster angle on the drivers side to be between 5 and 6 degrees. (Top of the inner knuckle tipped towards the rear of the vehicle) In certain cases caster angles as low as 3 to 4 degrees are possible to get better drive shaft angles however this may effect the handling of the vehicle. Too much caster change from the factory settings may also cause the coil springs to bow and effect clearances on the steering linkages. Keep length within the minimum and maximum lengths shown below.

